


# Changing the Scan Speed

This exercise will teach you how to change the speed of scanning.

functions  
used:

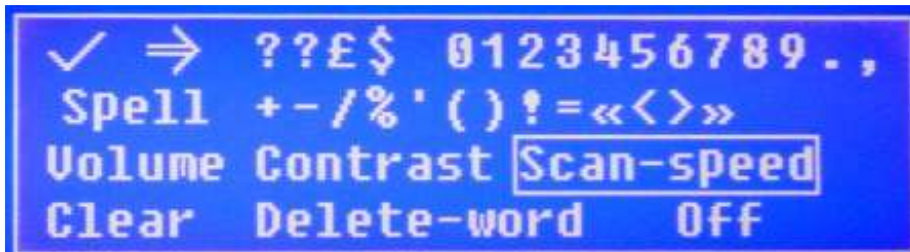

(page 2)

1 Select **⇒** then **Scan-speed**

2 The display will now show:



3 Select **Faster** to increase speed, or **Slower** to decrease speed.

*Note that to prevent the possibility of the scan speed being set too fast by mistake, the scan speed can only be changed by one step at a time, and the scan speed setup will automatically exit and the screen will revert to the Top scan screen after a selection is made.*

4 Select **No change** to exit setup and return to Top Screen.