

The Lightwriter keys require a lot of force before they will type!

- Is the same amount of force required for all keys? If so, then check the **Key Delay** setting in the Setups:
 - Press **Mem** then **Replay**.
 - Press the fullstop (period) key **.** to go through the main Setup headings until you reach the **Keyboard** sub-heading.
 - Press the **SPACE** key to scroll through different sub-headings until you reach the **Key Delay** sub-heading.
 - Press **0** ('zero' key) to reset the setting to **None**.
 - Press **+** ('plus' key) to increase the setting if required. Press the **On/C** key to leave Setups with your current options saved.
 - If some keys require more force than others, the keyboard needs to be cleaned.
 - If cleaning the keyboard does not solve the problem, the keyboard may need to be replaced.
-