

## My Lightwriter does not appear to be working properly!

- To reset the Lightwriter to factory defaults, press **Mem** then **Mem** then **Mem** then **L** then **0** (number zero). Answer **Y** when you're asked.
  - The reset procedure will not effect stored messages. However, all the different parameters that you may have set previously, need to be reset.
-