

# Resetting Lightwriter setups

This activity steps through resetting all the Lightwriter setups to the default values.  
This activity takes about 15 secs.

1. Press **On/C**
  2. Press **Mem** then **Mem** then **Mem**
  3. Screen says **Functions** Press the **L** key.
  4. Screen says **Which setup-group?** Press **0** to load factory setups.
  5. Screen says **Sure? Y=OK** Press **Y** to confirm.
  6. Screen says **setup-group loaded** briefly, and then clears.
  7. Press **Off**
  8. The setups are now all reset to the factory setups.
- 

# Resetting Lightwriter memories

This activity steps through resetting all the Lightwriter memories, and restoring the factory memories.  
This activity takes about 15 secs.

1. Press **On/C**
  2. Press **Mem** then **Mem** then **Mem** then **↑** then **'**
  3. Screen says **Advanced Functions** Press the **X** key.
  4. Screen says **Erase Mems? Y=OK** Press **Y** to confirm.
  5. Screen says **Really Sure? Y=OK** Press **Y** to confirm.
  6. Screen says **Erase Backups? Y=OK** Press **Y** to confirm.
  7. Screen says **Really Sure? Y=OK** Press **Y** to confirm.
  8. The memories are now all erased, and the factory memories are restored, (eg: H = HELLO HOW ARE YOU).
  9. Press **Off**
-