





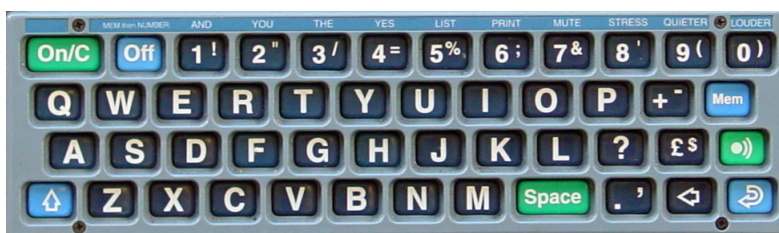


# Changing the Keyboard Layout

The keyboard layout can be changed between QWERTY and ABC.  
This activity requires a small cross-head screwdriver and takes about 5-10 minutes.



1. Press 
2. Type **EXPERT** then press  then  to enter **Expert Setups** and additional setups are now added to setup list.
3. Press the  key repeatedly to find **Keyboard** setup.
4. Change to **QWERTY** or **ABC** setting using  key
5. Press 
6. Unscrew the 4 keyguard-retaining screws and remove the keyguard.
7. Remove the 26 alphabet keys (leave all the other keys in place).
8. Moisten the rubber pegs with a damp cloth to prevent the keys sticking when being refitted.  
Replace the 26 keys in the alternative layout, checking they are aligned and sitting squarely on the rubber peg.  
*QWERTY layout for reference:*



*Alternatively-* to find the function of a key: turn Lightwriter on and press each rubber peg on the keyboard and screen will show which key it is.

9. Carefully replace keyguard and replace and screw down the retaining screws, taking care not to over-tighten the 4 screws